

SIM2000-24

24-Port SDSL Inverse Multiplexer with TC/PAM (G.SHDSL), 2B1Q and CAP Line Encoding

CAUTION Net to Net Technologies strongly recommends the use of proper electrostatic discharge (ESD) precautions when handling this equipment.

1.0 INSTALLATION

1.1 Unpack and inspect the SIM2000-24

If there is visible damage, do not attempt to connect the device; contact Customer Support at 1-877-638-2638 (001-603-427-0600 for international customers) or Support@NetToNet.com.

1.2 Install the SIM2000-24 in an IP DSLAM chassis

NOTE There must be a Multiplexer Uplink Module (MUM) installed in the IP DSLAM chassis in order for interface modules to operate.

Net to Net Technologies' IP DSLAM interface modules are hot swappable; installing or removing an interface module while the chassis is powered up does not affect the operational status of other interface modules within the chassis. The IPD12000 is a fourteen slot chassis; slots 1-12 are reserved for interface modules (such as the SIM2000-24) and slots 13-14 are reserved for MUMs. Interface modules may be placed in any order in slots 1-12. The IPD4000 is a five slot chassis; slots 1-4 are reserved for interface modules and slot 5 is reserved for a MUM.

- Align the SIM2000-24 with the slot module guides of the chosen slot for installation (slot 1-12 on the IPD12000 or slot 1-4 on the IPD4000)
- Slide the SIM2000-24 firmly into the chassis: DO NOT USE EXCESS FORCE
- Secure the SIM2000-24 by tightening the fastening screws on the module faceplate
- Verify that the PWR (Power) LED on the SIM2000-24 faceplate is illuminated

1.3 Connect the SDSL Line(s)

Plug the SDSL cable RJ21 connector into the corresponding RJ21 port on the back of the IP DSLAM. For most applications, a SIM2000-24 SDSL link requires a STRAIGHT-THROUGH DSL CABLE. The SIM2000-24 can be connected with a remote SDSL subscriber unit via either a single SDSL line or double SDSL lines (loop bonding). For each port being connected to a remote SDSL subscriber unit, verify that the

SDSL link has been established; the SDSL LK LED for that port will pulse green to indicate the connection has been made. Link up time can vary from one to five minutes depending on the quality, gauge and distance of the copper cables.

SDSL RJ21 Port Pinout																									
PORT		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
SDSL	Tip	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49
	Ring	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

(pins 25 and 50 are not used)

1.3.1 Loop Bonded SDSL Connection

Using two SDSL lines for one network connection (loop bonding) will net twice the speed and data passing capability as a single-line SDSL connection. A second SDSL line can also be considered a backup for the first, and vice versa, should either line become disabled. Any two SIM2000-24 ports (consecutive or not) may be connected to an SNE2020-S or SNE2020G-S subscriber unit to establish a loop bonded connection.

NOTE Net to Net Technologies strongly suggests that any ports on the SIM2000-24 intended for a loop bonded connection with an SNE2020-S or SNE2020G-S be identically configured prior to connection; bonding ports with different configurations will likely result in misplaced, misdirected and/or dropped data. See the NMS Management User Guide and /or the CLI and SNMP Management User Guide for configuration instructions. If default settings are to be used for both ports, then prior configuration is not necessary and you may proceed with installation.

1.3.2 Single Line SDSL Connection

A single line connection can be established between a SIM2000-24 and any of Net to Net's SDSL subscriber units.

1.3.3 Bandwidth and Line Code

There are nine bandwidth options for SIM2000-24 SDSL connections. Distance capabilities vary, dependent upon the type of line code being utilized. The defaults are TC/PAM line encoding (G.SHDSL) at 272 kbps. See Section 4.0 SIM2000-24 Parameters for more detailed information regarding bandwidth and line code.

2.0 DEFAULT SETTINGS

No configuration is necessary for the SIM2000-24 to operate at default settings.

CONFIGURATION	DEFAULT
Line Code	TC/PAM (G.SHDSL)
Circ. ID (Circuit Identification)	n/a (no default)
IP Range 1	0.0.0.0 - 255.255.255.255
IP Range 2	0.0.0.0 - 0.0.0.0
Speed:	272 kbps

CONFIGURATION	DEFAULT
Protocol	All
VLAN Ranges (1-10)	0 - 0 (off)
Backbone-VLAN	0 (off)
Pri (VLAN Priority)	0 (none)
Flood	Upl (Uplink)

3.0 SIM2000-24 MANAGEMENT

Once the SIM2000-24 has been installed, line code, bandwidth and all other configurations are software selectable. Dependent upon the MUM model installed in your DSLAM, the SIM2000-24 can be configured via Command Line Interface (CLI), Simple Network Management Protocol (SNMP) and/or Net to Net Technologies' web-based Network Management System (NMS). For further information regarding SIM2000-24 management and configuration please refer to Net to Net Technologies' NMS Management User Guide and/or CLI and SNMP Management User Guide.

3.1 Via NMS

Net to Net Technologies' Network Management System (NMS) is an embedded web server that resides within the firmware of IP DSLAM MUMs (select models only). This web server maintains statistical and configuration data for the SIM2000-24 and includes a scaled-down version of Simple Network Management Protocol (SNMP v1.0).

NOTE If your IP DSLAM is newly installed and has not yet been set up for management access, you must configure the IP Address, Subnet Mask and Gateway (via either NMS or CLI) before you will be able to access data or complete any other configurations. See the NMS Management User Guide or the CLI and SNMP Management User Guide for initial configuration instructions.

3.1.1 Establish a Connection with the IP DSLAM MUM

Establish a connection with your IP DSLAM MUM either directly (through the Ethernet RJ45 MGMT Port on the MUM faceplate) or, if the system has been so configured, from a PC on your local network. For direct connections, verify that the MGMT LNK LED on the MUM faceplate is illuminated (indicating the connection has been established).

3.1.2 Launch a Web Browser

Launch a web browser on your PC such as Microsoft Internet Explorer (v4.0 or higher) or Netscape Navigator (v4.0 or higher).

3.1.3 Enter the IP Address

Enter the DSLAM's IP address* into the address field at the top of your browser window. Press the Enter key.

3.1.4 Log In

Log in with your assigned username and password.* Please note that General Users have read only access; for SIM2000-24 configuration you must log in as a Superuser.

*If the IP address, username and/or password are unknown, contact your System Administrator or Information Technology Manager for assistance.

Once you have logged in as a Superuser, you may make configuration changes to the SIM2000-24, and any other interface modules installed in the IP DSLAM, as desired. For more detailed information regarding SIM2000-24 parameters and configuration, refer to Section 4.0 of this manual and/or the NMS Management User Guide.

3.2 Via CLI

Interface modules in an IP DSLAM with a Command Line Interface (CLI) compatible MUM (select models only) can be managed with a Terminal Emulator program (loaded onto your PC) via a set of commands and sub-commands/qualifiers.

3.2.1 Establish a Connection with the IP DSLAM MUM

Establish a direct connection with the MUM through the RS232 COM Port on the MUM faceplate.

3.2.2 Launch a Terminal Emulator

Launch a Terminal Emulator program on your PC. Net to Net Technologies copyright information will appear on your screen followed by a request for username.

3.2.3 Log in

Log in with your assigned username*. Once your username has been entered, a request for password* will appear. Please note that for SIM2000-24 configuration you must log in as a Superuser (General Users have read only access).

*If your username and/or password are unknown, contact your System Administrator or Information Technology Manager for assistance.

Once you have logged in as a Superuser, you may make configuration changes to the SIM2000-24, and any other interface modules installed in the IP DSLAM, as desired. For more detailed information regarding SIM2000-24 parameters and configuration, refer to Section 4.0 of this manual and/or the CLI and SNMP Management User Guide.

3.3 Via SNMP

Simple Network Management Protocol (SNMP) is the standard for management of Transmission Control Protocol/Internet Protocol (TCP/IP) networks and network devices. Interface modules in an IP DSLAM with an SNMP compatible MUM can be managed with a MIB Browser program (loaded onto your PC) via a set of Object Identifiers (OIDs). OIDs are strings of numbers specifying various configuration commands and requests for data.

NOTE If your IP DSLAM is newly installed and has not yet been set up for management access, you must configure the IP Address, Subnet Mask and Gateway (via either NMS or CLI) before you will be able to utilize SNMP. See the NMS Management User Guide or CLI and SNMP Management User Guide for initial configuration instructions.

3.3.1 Establish a Connection with the IP DSLAM MUM

Establish a connection with the MUM either directly (through the Ethernet RJ45 MGMT port on the MUM faceplate) or, if the system has been so configured, from a PC on your local network. For direct connections verify that the MGMT LNK LED on the MUM faceplate is illuminated (indicating the connection has been established).

3.3.2 Launch a MIB Browser

Launch a MIB Browser program on your PC. If you have not yet downloaded the MIBs to your PC or local network, you can obtain the Net to Net enterprise MIBs from <ftp://ftp.nettonet.com/download/mibs> and the supported portions of MIB-II from RFC 1213 at <http://www.ietf.org/rfc.html>. Once these have been downloaded, you will need to compile them into your MIB Browser; see your MIB Browser user manual for further instruction.

Once the MIBs have been downloaded, you will be able to make configuration changes to the SIM2000-24, and any other interface modules installed in the IP DSLAM, as desired. For more detailed information regarding SIM2000-24 parameters and configuration, refer to Section 4.0 below and /or the CLI and SNMP Management User Guide.

4.0 SIM2000-24 PARAMETERS

Parameters common to all interface module models are defined in both the NMS Management User Guide and the CLI and SNMP Management User Guide. Parameters specific to the SIM2000-24 are outlined below.

4.1 Line Code

Line code configuration for the SIM2000-24 applies to all ports; individual ports cannot be configured with different line codes.

4.1.1 TC/PAM (G.SHDSL) - DEFAULT

Transmission Convergence/Pulse Amplitude Modulation (TC/PAM) line code is a sixteen-level PAM technique which incorporates advanced Trellis code, precoding, spectral shaping, equalization circuits and forward error correction. Otherwise known as G.SHDSL.

4.1.2 CAP

Carrierless Amplitude and Phase (CAP) line code modulates transmit and receive signals into two wide-frequency bands that can pass through a filter without being attenuated.

4.1.3 2B1Q

Two Binary, One Quaternary (2B1Q) line code is a four-level Pulse Amplitude Modulation (PAM) technique which reduces the signaling rate to half of the bit rate, thereby doubling transmission efficiency.

4.2 Speed

There are nine bandwidth options for SIM2000-24 SDSL connections; default is 272 kbps. Distance capabilities vary, dependent upon the type of line code being utilized. Distances listed below assume the use of 26 American Wire Gauge (AWG) cable; connections made with cable of a greater gauge (e.g., 24 AWG) will link up at greater distances. The units may not link up if the cable is in poor condition or if the cable distance is greater than a particular bandwidth will support.

Remote SDSL subscriber units determine line speed through their communication with the SIM2000-24.

SDSL Distance Capabilities										
BANDWIDTH	kbps	2,320	2,064	1,552	1,040	784	528	400	272	144
G.SHDSL Distance	Feet	11,300	12,200	12,800	16,000	16,800	18,400	19,400	20,200	25,400
	Meters	3,444	3,719	3,901	4,877	5,121	5,608	5,913	6,157	7,742
CAP Distance	Feet	11,000	11,900	12,600	15,500	16,000	17,900	18,900	23,100	24,700
	Meters	3,353	3,627	3,840	4,724	4,877	5,456	5,761	7,041	7,529
2B1Q Distance	Feet	10,400	10,800	13,400	14,800	15,800	17,400	18,200	19,200	23,800
	Meters	3,170	3,292	4,084	4,511	4,816	5,304	5,547	5,852	7,254

5.0 DATA STORAGE

5.1 RAM and NVRAM

Configuration backup is inherent in the SIM2000-24. Upon initial power up of the IP DSLAM, default parameters of the SIM2000-24 will remain in place unless changed through NMS, CLI or SNMP. Once changed, new configurations will automatically be recorded in both the Random Access Memory (RAM) of the SIM2000-24 and the Non-Volatile Random Access Memory (NVRAM) of the MUM. While data stored in SIM2000-24 RAM will be erased if the module is removed from the IP DSLAM or the IP DSLAM loses power, interface module data stored within MUM NVRAM will remain intact (even if the unit loses power) unless deliberately cleared or reconfigured.

5.2 Local File

Individual port configurations can be saved locally on your PC as a backup, and/or for use as a template for future configurations. Once the SIM2000-24 has been configured as desired, the settings can be flash uploaded through a Trivial File Transfer Protocol (TFTP) tool with a GET command and the following information:

Host name: [IP DSLAM IP Address]
 Remote filename: NVR_CFG.bin.[superuser password]
 Local filename: [user preference]

Port configuration files can be flash downloaded FROM a local file TO a SIM2000-24 as well; simply replace the GET command with a SET command.

NOTE Only individual port configurations can be saved to a local file. Chassis configurations are not flash up or downloadable; they must be manually configured for each unit.

6.0 ADDITIONAL INFORMATION

6.1 LED Indications

LED	State	Indication	Additional Information
PWR (Power)	solid green	SIM2000-24 is operational	If the Power LED is not illuminated, it is unlikely the SIM2000-24 is receiving power and none of the LEDs will be illuminated.
SDSL LK (Link)	pulsing green	SDSL connection is established and active	The SDSL link is operational and traffic is flowing.
	solid green	problematic SDSL connection	A connection exists but there is indication of a problem with the SDSL line.
	no illumination	no SDSL connection	
SDSL RX (Receiving)	flashing amber	SDSL activity	The port is receiving either data from the remote SDSL subscriber unit or statistical packets from the IP DSLAM management.
	solid amber	heavy Rx traffic	The port is receiving large amounts of data from the remote SDSL subscriber unit.
	no illumination	no activity	A link may exist but the port is not receiving any data from the remote SDSL subscriber unit.
SDSL TX (Transmitting)	flashing amber	SDSL activity	The port is transmitting data to the remote SDSL subscriber unit.
	solid amber	heavy Tx traffic	The port is transmitting large amounts of data to the remote SDSL subscriber unit.
	no illumination	no activity	A link may exist but the port is not transmitting any data to the remote SDSL subscriber unit.

(A pulsing LED blinks steadily at a rate of once per second. A flashing LED blinks at a more rapid, less constant rate.)

6.2 Regulatory Compliance for Class A Equipment

6.2.1 US Federal Communications Commission (FCC)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

6.2.2 Industry Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

6.2.3 Europe

This Class A product complies with European Norm EN55022.

Warning: In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures to correct the situation.

210-0000049 rev05

© Copyright 2002 Net to Net Technologies, Inc.

™ The Net to Net Logo is a trademark of Net to Net Technologies, Inc.

Worldwide Headquarters

Net to Net Technologies
112 Corporate Drive
Portsmouth, NH 03801
USA
+1 877-638-2638

<http://www.NetToNet.com/>
Contact@NetToNet.com

EMEA Headquarters

Net to Net Technologies
Victoria House 19 Park Way
Newbury Berkshire RG14 1EE
UK
+44 (0) 1635 570950